



Retaining End Plates are used at the lower end of a vertical run of trunking to stop the lid of the trunking from slipping down, they project above the lid. Standard End Plates fit below the lid, inside the trunking.

**End Plates - Black
(standard illustrated)**

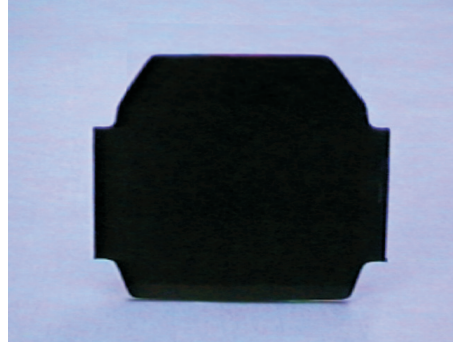

**End Plates - Grey
(retaining illustrated)**

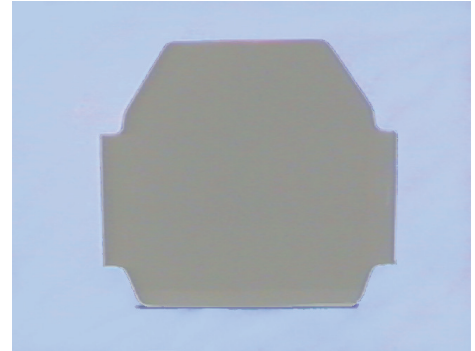

Trunking Size	End Plates - Black (standard illustrated)		End Plates - Grey (retaining illustrated)	
	Standard	Retaining	Standard	Retaining
25mm Wide 50mm High	R-EP SB2550	R-EPR B2550	R-EP SG2550	R-EPR G2550
25mm Wide 75mm High	R-EP SB2575	R-EPR B2575	R-EP SG2575	R-EPR G2575
50mm Wide 50mm High	R-EP SB5050	R-EPR B5050	R-EP SG5050	R-EPR G5050
50mm Wide 75mm High	R-EP SB5075	R-EPR B5075	R-EP SG5075	R-EPR G5075
75mm Wide 75mm High	R-EP SB7575	R-EPR B7575	R-EP SG7575	R-EPR G7575

