



Retaining End Plates are used at the lower end of a vertical run of trunking to stop the lid of the trunking from slipping down, they project above the lid. Standard End Plates fit below the lid, inside the trunking.

**End Plates - Black  
(standard illustrated)**

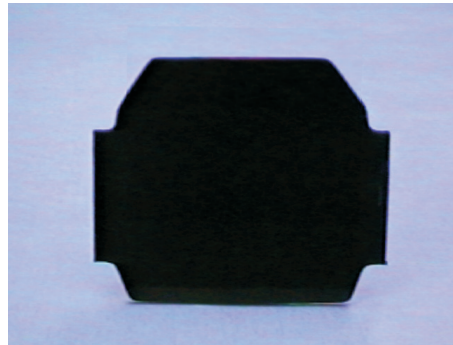

**End Plates - Grey  
(retaining illustrated)**

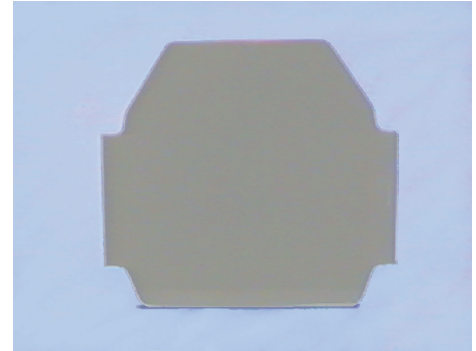

Trunking Size	End Plates - Black (standard illustrated)		End Plates - Grey (retaining illustrated)	
	Standard	Retaining	Standard	Retaining
25mm Wide 50mm High	R-EPSB2550	R-EPRB2550	R-EPST2550	R-EPRG2550
25mm Wide 75mm High	R-EPSB2575	R-EPRB2575	R-EPST2575	R-EPRG2575
50mm Wide 50mm High	R-EPSB5050	R-EPRB5050	R-EPST5050	R-EPRG5050
50mm Wide 75mm High	R-EPSB5075	R-EPRB5075	R-EPST5075	R-EPRG5075
75mm Wide 75mm High	R-EPSB7575	R-EPRB7575	R-EPST7575	R-EPRG7575

